

V30

3D SMART GLASSES

User Manual


English Version

Do not keep a fixed static image on screen for a long time.
Prolonged display of static content may cause image retention.



Function Introduction and Operation Guide — 3D Glasses

Function Introduction (3D Glasses)

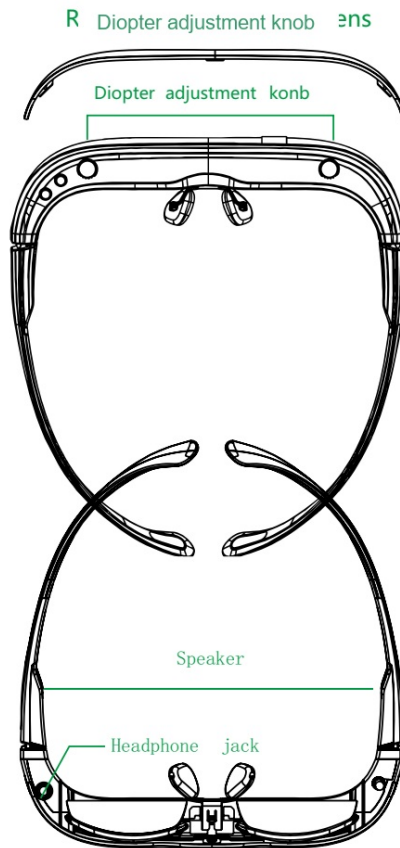

15

1. Power on

Connect the glasses directly to an external device that supports USB-C video output. The glasses will turn on automatically.

2. Power off

Disconnect the USB-C cable. The glasses will shut down automatically.

3. 2D/3D switch

Press and hold the 3D button for about 2 seconds. Release the button after the screen briefly flashes to switch between 2D and 3D.

4. Volume adjustment

Press the 3D button to adjust the volume.

5. Brightness adjustment

Press the B button to adjust the brightness.

6. Diopter adjustment

Rotate the left and right adjustment knobs in the marked direction. Adjustment range: 0 to -6.0D (0–600 degrees of myopia).

7. External headphones

The glasses include directional speakers and support 3.5 mm wired headphones. Audio switches to the headphones automatically after connection.

Technical Parameters — 3D Glasses

Item	Parameter
Display	1920 × 1080 × 2; PPI up to 4496
Brightness	1800 cd/m ²
Lens	Multiple resin lens elements
Diopter	0 to -6.0D adjustable for myopia
Interface	USB-C
Sound	Directional speakers; 3.5 mm headphone jack
Controls	Physical buttons
Power consumption	1.8 W
Operating environment	-10°C to 60°C; humidity below 95%
Dimensions	186 × 155 × 46 mm

Important notes

3D format

This product supports side-by-side 3D video content only.


USB-C compatibility

The connected source device must support USB-C video output. Some HDMI or DisplayPort sources may require a compatible adapter.

Static images

Function Introduction — Smart Controller

Function Introduction (Smart Controller)

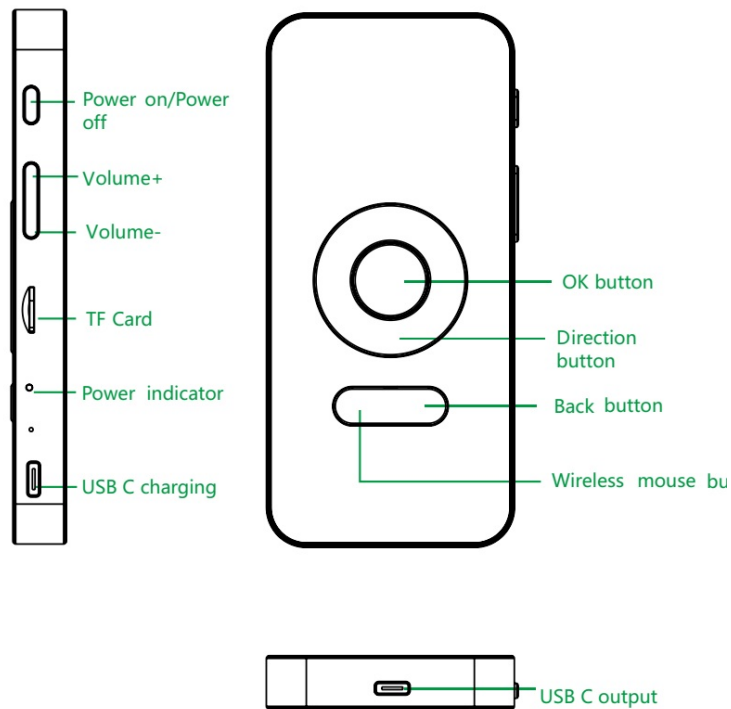

Power button

Press and hold to turn the controller on or off.

Volume buttons

Press to increase or decrease the volume.

TF card

Supports memory expansion up to 512 GB.

Power indicator

Blue indicates power on. A flashing red light indicates low battery. During charging while powered off, red indicates charging and blue indicates fully charged.

USB-C charging / OTG

Supports DC 5V/2A charging and OTG devices such as a mouse, keyboard or external drive.

OK and direction buttons

Confirm selections and move up, down, left or right.

Air mouse button

Switches between button-control mode and air-mouse mode.

Back button

Returns to the previous page.

Operation Guide — Smart Controller

1. Power on

Press and hold the Power button for about 1 second. Release it when the indicator turns blue.

2. Connect the glasses

After the smart controller is powered on, connect the glasses to the controller's USB-C video output port.

3. Power off

Press and hold the Power button for about 1 second, then follow the on-screen prompt to shut down.

4. Charge

Connect a DC 5V/2A charger to the USB-C charging port. The indicator is red while charging with the controller powered off and turns blue when fully charged.

5. Wi-Fi connection

Open Settings → Network & Internet → Wi-Fi, select a network and enter the password.

6. Bluetooth connection

Open Settings → Device Preferences → Bluetooth, enable Bluetooth and pair a new device.

Charging note

After the indicator turns blue, charging may continue for approximately 30 minutes to help ensure a full charge.

Technical Parameters — Smart Controller

Item	Parameter
CPU	64-bit Cortex-A55, up to 1.8 GHz
GPU	ARM G52 2EE; OpenGL ES 1.1/2.0/3.2
RAM	2 GB LPDDR4
Storage	32 GB eMMC
Expansion	TF card up to 512 GB
Wireless	Wi-Fi 6 dual-band 2×2 11ax; Bluetooth 5.0
Battery	14.8 Wh, 3.7 V rechargeable lithium-ion battery
Charging	DC 5V/2A
Output	USB-C video output
Controls	Buttons and air mouse
Power consumption	2 W
Operating environment	-10°C to 60°C; humidity below 95%
Dimensions	140 × 65 × 14 mm

Product list

- 3D glasses
- Smart controller
- USB cable
- Cleaning cloth
- User manual
- Certificate

Package contents may vary by order configuration.

V30

3D智能眼镜


使用说明书

中文版

请勿长时间保持固定静态画面，
否则可能造成屏幕残影。



功能简介(3D眼镜)

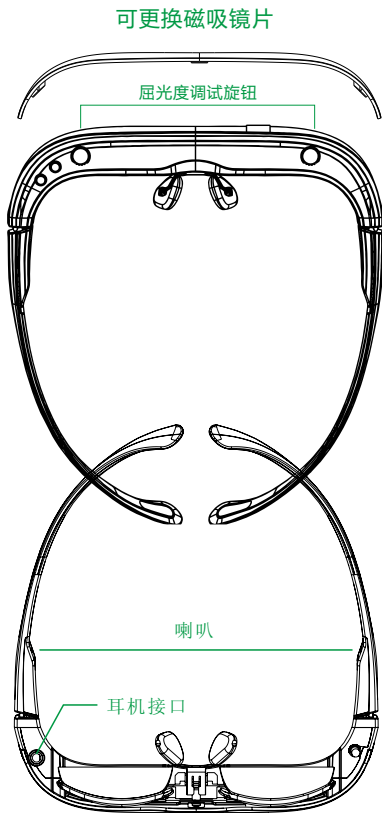

使用方法(3D眼镜)

一. 开机

直接连接带TYPE C输出的外部设备,眼镜会正常开机.

二. 关机

拔掉TYPE C连接,眼镜正常关机.

三. 3D切换

长按3D切换键,屏幕会出现黑屏闪一下,松开按键.即可在2D/3D间切换.

四. 音量调节

点按3D键,调节音量大小.

五. 亮度调节

点按B键,调节亮度大小.

六. 屈光度调节

按标示方向旋转调节旋钮,调节屈光度大小.调节范围0~-6.0D(近视0-600度调节).


七. 外接耳机

本产品自带定向音双喇叭,配戴后即可正常收听声音.支持外接3.5mm耳机.插入耳机可自动切换声音到耳机.

技术参数（3D眼镜）

项目	参数
显示屏	1920*1080*2,PPI高达4496
亮度	1800cd/m2
镜片	一组多片树脂镜片
屈光度	近视0-600度可调
接口	Type C
声音	定向音喇叭, 3.5mm耳机
交互	按键
功耗	1.8 W
使用环境	温度：-10℃---60℃ 湿度：<95%
产品尺寸	186x155x46 mm

功能简介（智能控制主机）

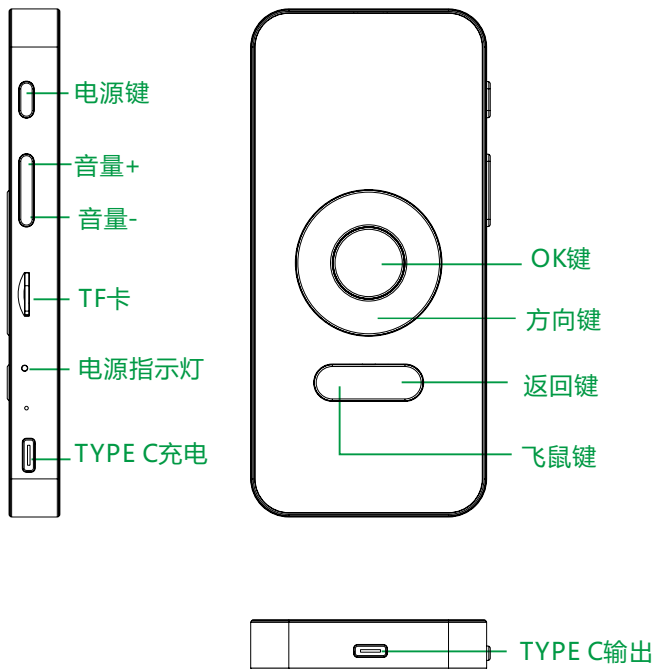

功能简介（智能控制主机）

电源键 --- 长按，控制电源开/关机

音量+, - --- 点按，调节音量大小

TF卡 ---- 最大可支持512GB内存扩展

电源指示灯 --- 指示产品开机/关机状态，开机时显示蓝灯，电量低时，红灯闪烁。关机时，指示灯关。
指示充电状态，关机充电时显示红灯，电量充满后显示蓝灯。

TYPE C充电 --- 支持DC5V/2A充电
支持OTG外部扩展，连接鼠标，键盘，移动硬盘等

OK键 --- OK确认键

方向键 --- 调节鼠标移动方向

飞鼠键 --- 在按键操控模式和飞鼠操控模式切换。

返回键 --- 返回上一页面

使用方法（智能控制主机）

一. 开机

长按Power键1秒左右，电源指示灯蓝灯亮，松开按键，表示产品开机。

二. 连接3D头戴显示器

在智能控制主机开机后,插入3D眼镜。

三. 关机

长按Power键1秒左右,按提示操作进入关机。


四. 充电

通过Type C接口连接充电器充电，支持5V/2A输入。

关机插入Type C充电，指示灯亮红灯。电量充满后，指示灯转为蓝灯。指示灯转为蓝灯后,可继续充电0.5小时，以使电量充满。


五. WIFI连接

点按SET键,调出设置菜单,

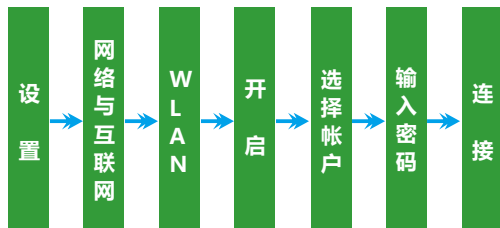

使用方法（智能控制主机）

六. 蓝牙连接

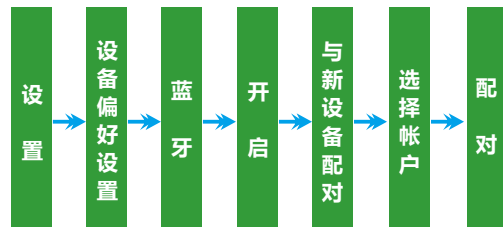

七. 桌面简介



媒体中心 --- 音频，视频文件播放，不支持AC3,DTS音频解码

nPlayer --- 视频播放器，支持AC3,DTS音频解码

当贝市场 --- 可下载相关应用

闪电 --- 网页浏览器

WifiDisplay --- 可用于手机，电脑等镜像方式无线投屏

多屏互动 --- 可用于视频TV推送

乐播投屏 --- 可用于镜像或TV推送,在投屏输出端安装乐播投屏后
投屏信号更稳定

技术参数（智能控制主机）

项目	参数
CPU	64位Cortex-A55,主频高达1.8GHz
GPU	ARM G52 2EE ,支持OpenGL ES1.1/2.0/3.2
RAM	2GB LPDDR4
ROM	32GB EMMC
存储扩展	最大可支持512GB TF卡
WIFI	Wi-Fi6 Dual-band 2X2 11ax +Bluetooth 5.0
电池	14.8Wh 3.7V锂离子充电电池
充电	DC 5V / 2A
接口	Type C输出
交互	按键，飞鼠
功耗	2 W
使用环境	温度：-10℃---60℃ 湿度：<95%
产品尺寸	140x65x14 mm

产品清单

产品名称	3D视频眼镜		
主件		3D视频眼镜	1台
		控制主机	1台
		USB数据线	1条
		眼镜布	1片
		说明书	1本
		合格证	1张

服务保障

为了您更好地享受“三包”权益，请购买产品后妥善保管购机发票及本使用手册用户联，购机发票需填写完整、正确，并加盖销售商印章。

用户联

用户信息

姓名：_____ 联系电话：_____

邮编：_____ 电子邮件：_____

通讯地址：_____

产品信息

产品名称：_____ 产品型号：_____

机器编号：_____

销售商信息

销售商名称（加盖公章）：_____

购买日期：_____ 联系电话：_____

通讯地址：_____

温馨提示

- 1、在您购买本产品12个月内，本公司对正常使用情况下的本产品，在质量保证范围内为您提供免费保修服务；
- 2、对于保修过程中被更换的产品及配件，本公司将严格按照“三包”规定及相关政策为您进行处置；
- 3、该产品发生故障，影响到您的正常使用时，您可将其送交本公司设在全国各地的授权维修服务网点进行维修，以邮寄方式送交维修的，其故障发生时间以邮寄寄出时间为准；
- 4、如果在产品使用过程中出现以下情况之一的，将不在本公司可为您提供免费保修服务范围之内，敬请了解；
 - 1)、产品超过“三包”有效期的；
 - 2)、无销售凭证和本使用手册的；
 - 3)、包括但不限于剧烈撞击、挤压、跌落等非正常条件下使用而造成的损坏；
 - 4)、因疏忽进水、高温火烤、其他物质渗进产品内造成损坏；
 - 5)、非本公司维修人员或您自行拆卸本产品导致无法正常使用的；
 - 6)、意外事件自然灾害导致的故障或损失。
- 5、本产品不带电源适配器销售，消费者若使用电源适配器供电，则应购买配套使用获得CCC 认证并满足标准要求的电源适配器
- 6. 请勿使用改装电池,禁止拆解,撞击,挤压或投入火中,若出现严重膨胀,请勿继续使用,勿将电池置于高温环境中,电池浸水后禁止使用.

维修记录

送修日期	故障描述及处理结果	交验日期	维修员